
WIRING INSTRUCTIONS 12 VOLT LED PANEL (LEDP) PATH LIGHT FIXTURES

WARNING:

All PL Series LEDP fixtures (except PL-07) do not have internal LED Driver.

Fixture must be connected to supplied external LED Driver per instructions below.

DO NOT connect fixture directly to 12v as this will damage the LED and void warranty.

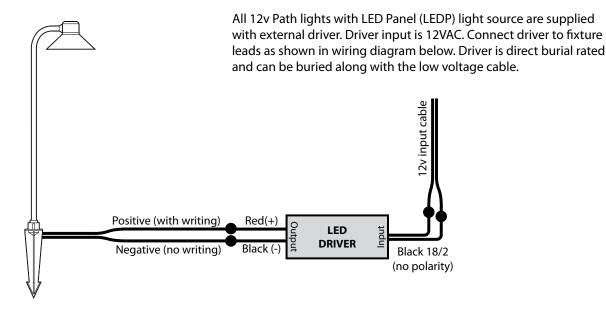

090214

INSPECTED BY:

WARNING:

All PL Series LEDP fixtures (except PL-07) do not have internal LED Driver.

Fixture must be connected to supplied external LED Driver per instructions below.

DO NOT connect fixture directly to 12v as this will damage the LED and void warranty.

