 


INSTALLATION FOR BBQ LIGHT FIXTURES:

WARNING: Read all instructions carefully when using outdoor portable BBQ light fixtures. Basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

1. Rotate adjustable vise screw to open wide enough to slip over table/counter/grill edge.
2. Secure fixture by rotating clamp clockwise and firmly hand tighten.
3. Adjust the flexible arm to desired direction.
4. Connect 18/2 black fixture wire to main 12/2, 10/2, 8/2 using gel filled wire nuts.
5. Turn on 12v power with switch located on mounting clamp and check for proper operation.

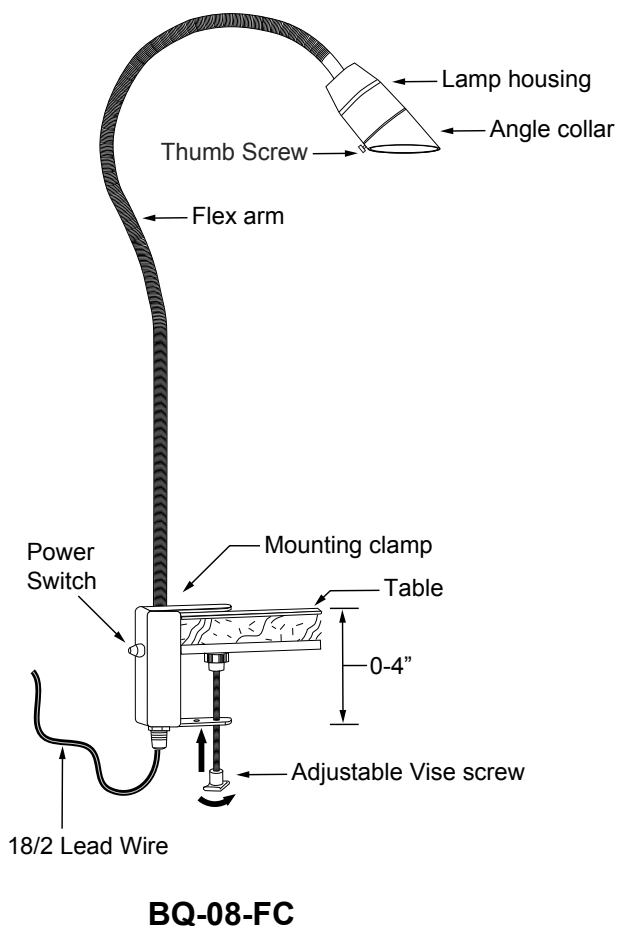

LAMP INSTALLATION/REPLACEMENT

NOTE: Turn off and let fixture cool down before servicing fixture.

To re-lamp **BQ-03-FC**, hold bell firmly in one hand. Push S.C. type light bulb into socket and turn counter clockwise to release lamp. Check label on fixture for correct light bulb type and wattage. Insert new light bulb by pushing into socket and rotating clockwise to lock in place. Turn on to check for proper operation.

 
To re-lamp **BQ-07-FC (Aluminum)**, remove the top two (2) screws on the left end plate using a Philips #2 screwdriver and loosen the bottom screw but do not remove it. Rotate left end plate down and slide lens out of fixture. Holding fixture firmly, push S.C. type light bulb into socket and turn counter clockwise to release lamp. Check label on fixture for correct light bulb type and wattage. Insert new light bulb by pushing into socket and rotating clockwise to lock in place. Insert lens, rotate end plate back into position, then replace and tighten screws. Turn on to check for proper operation.

To re-lamp **BQ-07-FC (Brass & Copper)**, remove screws on each side of lens cover plate using a Philips #2 screwdriver (2 screws for Copper, 4 screws for Brass) and pull off lens cover plate. Push S.C. type light bulb into socket and turn counter clockwise to release lamp. Check label on fixture for correct light bulb type and wattage. Insert new light bulb by pushing into socket and rotating clockwise to lock in place. Push lens cover plate back onto body then replace and tighten screws. Turn on to check for proper operation.

To re-lamp **BQ-07-FC (Stainless Steel)**, hold fixture body firmly and pull lens cover plate from body. Push S.C. type light bulb into socket and turn counter clockwise to release lamp. Check label on fixture for correct light bulb type and wattage. Insert new light bulb by pushing into socket and rotating clockwise to lock in place. Push lens cover plate back onto body. Turn on to check for proper operation.

To re-lamp **BQ-08-FC**, remove thumb screw on bottom of cap (Stainless Steel and Copper versions do not have thumb screw.) Hold body and cap with each hand. Rotate and pull to separate. Pull MR16 light bulb away from socket to release. Check label on fixture for correct MR16 bulb type and wattage and insert new MR16 lamp with pins aligned with socket. Re-install cap onto body by rotating cap in a circular motion while sliding cap into the body. **DO NOT** push cap straight into body to prevent O-ring from slipping out of its groove. Tighten thumb screw (if applicable) once assembled. Turn on to check for proper operation.

CAUTION: Do not exceed maximum wattage marked on fixture label.

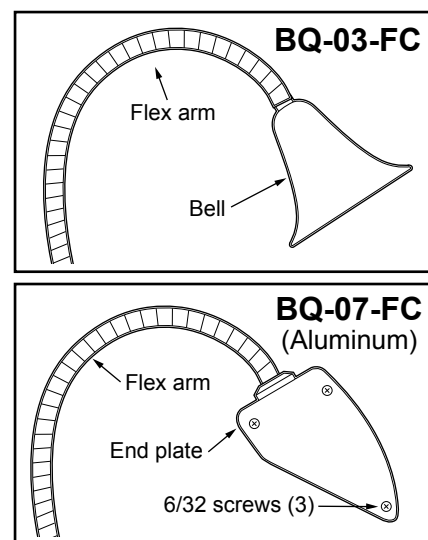

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE AND INJURY TO PERSONS:

1. Light bulb gets hot quickly; turn off, unplug/disconnect and allow to cool down before replacing the light bulb.
2. **DO NOT** touch hot lens, use guard or enclosure.
3. **DO NOT** look into light bulb when on.
4. Keep light bulb away from materials that may burn.
5. Use only with wattage/light bulb marked on fixture warning and instructions.
6. Use the correct light bulb base with the correct socket.
7. **DO NOT** touch light bulb at any time. Use a lint-free cloth when handling the Halogen light bulbs as oil from skin may damage lamp and shorten lamp life.
8. **DO NOT** operate fixture with missing or damaged parts.